

KL3

Installation and Operating Instructions

SPECIAL NOTES

Please read carefully:

- Before installing the lock, familiarise yourself with the installation and operating instructions.
- The factory preset combination is 0-0-0.
- Your KitLock is supplied ready to fit to doors up to 23mm thick.

FITTING INSTRUCTIONS




The KitLock can be fitted to cabinets, cupboards and lockers etc. as a direct replacement for existing cam locks. It can also be fitted easily to cupboards and cabinets that do not have an existing locking device.

Fixing Pack A Default Supply

- | | | |
|--------------|--------------------|--------------------|
| 1 KitLock | 2 Gripping Nut x 1 | 3 Straight Cam x 1 |
| 4 Screws x 1 | 5 Crank Cam x 1 | 6 Reset Pin x 1 |

Optional Additional Fixings

- | | |
|----------------|--------------|
| 1 Screws x 2 | 2 Washer x 1 |
| 3 Hook Cam x 1 | |

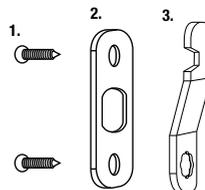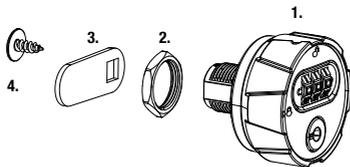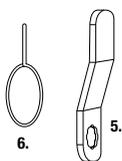

INSTALLATION GUIDE

A Replace existing cam lock with KitLock

- Step 1 Remove existing cam lock.
.....
- Step 2 Fit the KitLock to the door, passing the spindle through the existing hole.
.....
- Step 3 Now secure the lock by threading the hex nut onto the spindle.
.....
- Step 4 Fit required cam and secure with screw.
.....
- Step 5 Now check the operation of the lock using the factory preset combination 0-0-0.
.....
- Step 6 If the lock is functioning correctly, change the code using the instructions overleaf.

B New Installation

N.B. Optional **Additional Fixings** (above) may be required.

- Step 1 Mark a position at a suitable distance from the door edge, ensuring enough clearance for the cam to work.
.....
- Step 2 Using the 'Typical Door Prep.' dimensions (see overleaf), drill a hole to suit.
.....
- Step 3 Continue installation from step 2 to 6, left.

CHANGING THE CODE

1 With the indicator in the open position, turn the dials to the factory preset combination 0-0-0.

Note: If you have already changed the code, use your current combination for this step.

2 Depress the Reset Button using reset pin provided, turn the dials to your desired combination.

Note: Do not let go of the Reset Button while setting your combination.

3 Release the Reset Button after checking your combination is correct.

Note: The outer casing will turn freely between the open and locked position until the combination has been scrambled.

HOW TO USE YOUR LOCK

1 Once you have chosen and set your combination, turn the outer casing to the locked position.

2 Make a note of your chosen combination and scramble the dials. The lock is now locked.

3 To reopen, rotate the dials to your chosen combination and turn the outer casing to the open position.

Note: Your chosen combination will continue to operate the lock until it is changed.

FINDING THE CODE


Note This function requires the Code Finding Key (sold separately).

1 Insert the Code Finding Key when the indicator is in the locked position.

2 Turn the key clockwise 90 degrees.






3 Gently rotate each dial upwards until it stops. This is your code.

4 Turn the key anticlockwise 90 degrees and remove.

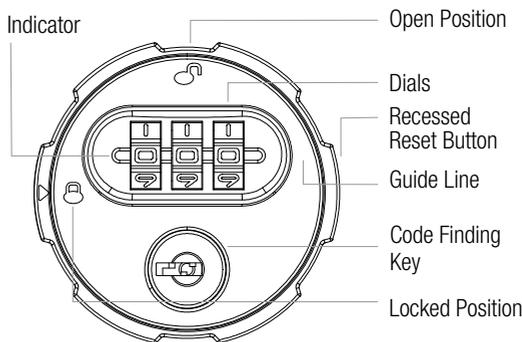

DIMENSIONS

 KL3

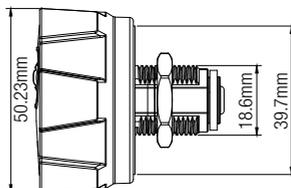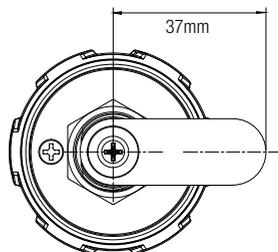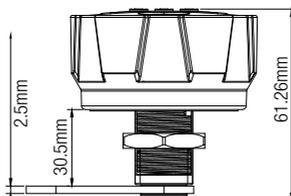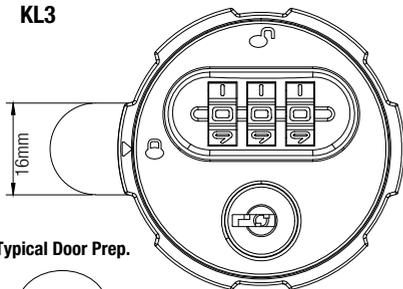

Multi-language instructions for the KL3 range



CODELOCKS INTERNATIONAL LTD.

sales@codelocks.com
www.codelocks.com
Helpline, service & spares
Phone: 0800 393 405

CODELOCKS EU B.V.

sales@codelocks.eu
www.codelocks.eu
Helpline, service & spares
Phone: +31 53 80 80 118

CODELOCKS INC. US

sales@codelocks.us
www.codelocks.us
Helpline, service & spares
Toll free: 1.877.codelock

CODELOCKS (Australia) PTY LTD

sales@codelocks.com.au
www.codelocks.com.au
Helpline, service & spares
Toll free: 1800 052 131

