#### **CHANGING THE BATTERY**


This unit runs on a **9V** alkaline battery. It is recommended that either '**Duracell**' or '**Energizer**' brands be used.

To change the battery, please refer to the diagram below.

 Simply slide the entry pad housing up and carefully pull it away from the mounting surface to expose the battery compartment.

## CHANGING THE BATTERY

- The battery connector is easily removed by unclipping it from the terminals on top of the battery. Care must be taken to ensure that the wires leading from the battery connector to the entry pad are not pulled out from the housing.
- Once the battery has been changed, carefully
  position the entry pad back over the mounting
  screws and slide the entry pad back into
  position. Ensure there are no wires or cables
  trapped between the entry pad and the safe
  door.

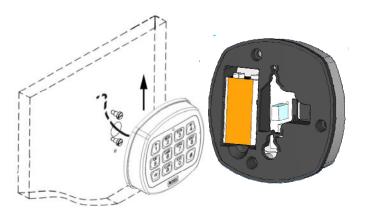

# **Specifications**

**Power Supply: DC 9V** 

Power Supply Range : DC 4.5 - 12V

Standby Current : < 15 mA Active Current : < 20 mA


Battery Low Voltage: 5.2 +/- 0.2 V

Working Temperature : -25 ° C ~ + 60 ° C

**Working Humidity: < 95%** 

Storage Temperature : - 45 ° C ~ + 85 ° C

Manager/User Code Length: 6 Digits

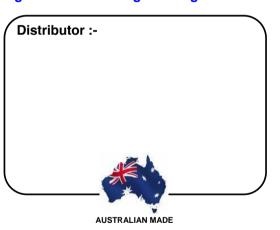



29 Henderson Road, Knoxfield, Victoria 3180, Australia.

Telephone: - + 61 3 9763 1796 Fax: - + 61 3 9763 42:

Email: - rosslocks@rosslocks.com.au. Web: - www.rosslocks.com.au.











# 1000-SERIES ELECTRONIC COMBINATION SAFE LOCK



**OPERATING INSTRUCTIONS** 

#### MANAGER STARTUP INSTRUCTIONS

TO OPEN FOR THE FIRST TIME Using the factory set manager code –

Enter (123456) 2 beeps sound.

The handle can now be turned to open the safe door.

# TO **CHANGE**

THE

MANAGER

CODE

# Always perform the following instructions with safe door open.

- Enter (000000) 2 beeps sound.
- Enter the factory set manager code (123456) 2 beeps sound.
- Enter the new 6 digit manager code. 1 beep sounds.
- To verify, re-enter the same manager code. 1 beep sounds.
- Enter the new manager code to verify the new code has been accepted. 2 beeps sound.

# TO ADD THE USER **CODE FOR** THE FIRST TIME

- Enter the manager code, and on the last digit of the code, hold the button down until 2 set of 2 beeps are sounded.
- Enter (1) 2 beeps sound.
- Enter the 6 digit user code. 1 beep sounds.
- To verify, re-enter the same user code. 1 beep sounds.
- Enter the new user code to verify the new code has been accepted. 2 beeps sound

#### MANAGER OPERATIONAL INSTRUCTIONS

# Always perform the following instructions with safe door open.

TO CHANGE THE USER CODE

- Enter (000000) 2 beeps sound.
- Enter the user code. 2 beeps sound.
- Enter the new 6 digit user code. 1 beep sounds. • To verify, re-enter the same user code. 1 beep sounds.
- Enter the new user code to verify the new code has been accepted. 2 beeps sound.

# TO DISABI F THE USER CODE

- Enter the manager code, and on the last digit of the code, hold the button down until 2 set of 2 beeps are sounded.
- Enter (2) 2 beeps sound.
- Enter the user code to verify this code has been disabled.

## TO **ENABLE** THE USER CODE

- Enter the manager code, and on the last digit of the code, hold the button down until 2 set of 2 beeps are sounded.
- Enter (1) 2 beeps sound.
  - Enter the user code to verify this code has been enabled.

## TO DELETE THE USER CODE

- Enter the manager code, and on the last digit of the code, hold the button down until 2 set of 2 beeps are sounded.
- Enter (3) 2 beeps sound.
  - Enter the user code to verify this code has been
  - To re-enter the user code, follow the procedure, "To add the user code for the first time".

#### **OPERATIONAL FEATURES**

# **STANDBY** MODE

- There is a time limit of 15 seconds allocated to complete an instruction.
- 2 beeps will sound to indicated you will need to re-start the instruction again.

# **WRONG ENTRY PENALTY**

- If 4 consecutive invalid codes have been entered. a 5 minute delay period will be activated.
- A beep, in intervals of 5 seconds, will sound until the time delay period has expired.

### **AUTOMATIC RE-LOCK**

A re-lock will occur within 4 seconds.

# LOW BATTERY INDICATOR

- If during the unlock cycle, a repeated beeping sound is detected, the battery is low and needs to be replaced.
- It is recommended that either "Energizer" or "Duracell" brands be used.
- To change the battery, please refer to the procedure, "Changing the battery".

## **USER OPERATIONAL INSTRUCTIONS**

# CHANGE

# Always perform the following instructions with safe door open.

- Enter ( 0 0 0 0 0 0 ) 2 beeps sound.
- Enter the user code. 2 beeps sound. **THE USER** • Enter the new 6 digit user code. 1 beep sounds.
  - To verify, re-enter the same user code. 1 beep sounds.
  - Enter the new user code to verify the new code has been accepted. 2 beeps sound.