



SECUGUARD

OPERATING INSTRUCTIONS


For Models

AP - 27KE
AP - 71KE
AP - 133KE


Thank you for purchasing **SECUGUARD** key cabinet. Please read the following instructions carefully before operating the key cabinet.

Check list of accessories (supplied with this key cabinet). If any of the following items are missing, please contact your dealer within 21 days.

- ① 2 x Emergency keys
- ② 1 x Operating instructions
- ③ 4 x AA (1.5V R06) Batteries

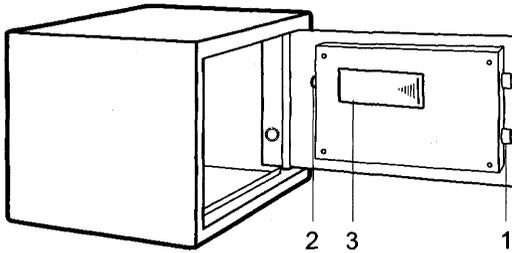

Schematic drawing of case

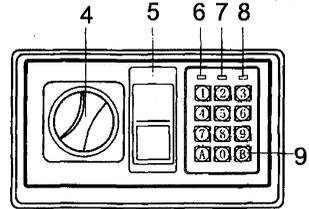

Schematic drawing of control panel

- | | | |
|------------------------|-------------------------|---|
| 1. Bolts | 5. Emergency Lock Cover | 9. Confirming Button |
| 2. Reset Button | 6. Green Light | 10. Power Supply:
4 X 1.5V batteries |
| 3. Battery Compartment | 7. Red Light | |
| 4. Knob | 8. Yellow Light | |

OPENING THE KEY CABINET FOR THE FIRST TIME

Upon first opening, users should open the key cabinet with emergency key. The operation in details refers to "opening the key cabinet with the emergency key."

- Remove emergency lock cover, then insert the emergency key, and turn it anticlockwise.
- Turn the knob clockwise to open the door.

CAUTION: Finish operation, pull out the emergency key and keep it in a safe place.

Please do not keep emergency keys in your key cabinet!

INSERTING THE BATTERIES

- Open the door.
- Insert 4 X 1.5V batteries into the battery compartment.
- Under normal condition, if both of the red and green lights are on at the same time, it means the voltage is low and you should insert new batteries.

CAUTION: Replace 4 fresh batteries by lining them up in a manner as indicated by the "+" and "-" signs. When outage for longer than thirty minutes, you should reset the user code.

OPENING THE DOOR

- Input your user code (3 to 8 digits), each pressing results one buzzer beep and yellow light flashes.
- Press “A” or “B” button, the green light will be on.
- Rotate the knob clockwise and pull outwards within 5 seconds, the door is opened.

CAUTION: The factory preset user code is “159”. Please input the user code again if the yellow light flashes with three buzzer beeps.

It is recommended that you change the factory preset user code to your own user code.

LOCKING THE DOOR

- Close the door and turn the knob anticlockwise to lock the door of the key cabinet.

CAUTION: Please check to see if the door is locked properly.

WRONG TRY PENALTY

- Entry of three (3) consecutive invalid codes starts a 20-second delay period. At the end of the delay period, three more consecutive invalid codes will restarts an additional 5-minute delay period. Entry will not respond to a single keystroke during delay Period. There are warning beeps during the delay period.

CAUTION: You can only stop the beeps by opening the key cabinet with emergency key and power-cut by removing the battery.

SETTING THE USER CODE

- With the door open, press the reset button, start setting code when the yellow light goes on.
- Input new user code (3-8 digits, by using all numbers from 0 to 9), and press the “A” or “B” button to confirm with one (1) buzzer beep, which indicates the acceptance and storage of the new code.
- If the yellow light flashes with 3 buzzer beeps, which means the code changing is not effective, and you need to try again.

SETTING THE MASTER CODE

- With the door open, input “0” twice and press the reset button, start setting code when the yellow light goes on.
- Input new master code (3-8 digits, by using all numbers from 0 to 9), and press the “A” or “B” button to confirm, it will be confirmed by one (1) beep and the setting is done successfully.
- If the yellow light flashes with 3 buzzer beeps, it means the new code is invalid and you need to try again.

OPENING THE KEY CABINET WITH THE EMERGENCY KEY

Upon first receipt of the key cabinet, or either the electronic circuit malfunction, or codes unknown. You could also use the emergency key to open the key cabinet.

- Remove the cover of the emergency lock.
- Insert the emergency key, turn it anticlockwise, in the meantime, turn the knob clockwise to open the door.

SECURING THE KEY CABINET

Key cabinet should be securely attached to a wall. Mounting holes are provided for securing the key cabinet to a wall.

Secuguard Safe Co.
35/24 Garling Road Kings Park NSW 2148 Australia
www.secuguardsafes.com.au

© 2019 Secuguard Safe Co. All rights reserved.